

TEXAS A&M SPECIFICATIONS
Male, Pink Elastique Trouser
Style # 01046

- STYLE:** Full fit male trousers constructed with a plain front, no pleats or darts. Concealed zipper flap at front center. Trouser to have a 1-inch inseam outlet in back panel from crotch to full length of inseam.
- FABRIC:** To be 55% Dacron Polyester / 45% Worsted wool. Elastique. Two ply warp / two-ply filling; 16 to 16.5 oz. Raeford style #645-437. The fabric shall be kaumographed.
- ZIPPER:** A number 5 talon, 8-inch long, heavy-duty metal zipper, with top stop. Zipper tape to be of matching color. Heavy-duty singlehook and eye closure (concealed) at top center above the fly zipper. Bartacking at base of zipper.
- WAISTBAND:** Set-on tapered waistband with rayon interlining, interlining to be matching color. Inset with Snugtex, or equivalent, elasticized interlining insert. "Browne outlet" method finished in an open manner with a minimum of 2-½ inch outlet showing no raw edges. The waistband is to be 1 ¾ inch wide all the way around.(FIGURE 3, page 38)
- POCKETS:** Two straight side pockets with edge top stitching. All pocketing shall be rayon twill. Bartacking on each pocket. Two set-in hip pockets without flaps. The left back pocket shall close with a single button sewn to the inner facing of the pocket and passing through a buttonhole in the outer pocket. (FIGURE 2, page 37)
- BELT LOOPS:** Seven belt loops measuring 1-inch wide x 1 ¾-inch inside height to allow for a 1-½ inch belt. The 7 belt loop locations are as follows: (1) centered on back seam, (2) set on front edge of side seam, (2) spaced equidistant between back seam and side seam loops, (2) spaced equidistant between side seam loops and front of trouser. Secure stitching required both for attachment to waistband and actual top stitching of loops. (FIGURE 1, page 36)
- BOTTOMS:** Trouser leg bottoms to be finished with a 3" + ¼ - ½ inch turn up. Hem stitching to be serged. NO CUFFS.
- LABELS:** Permanent size markings are required on all garments. Information to be included is a manufacturer's ID label, proper care label, waist and inseam measurements.
- SHIPPING:** It is requested that the trousers are shipped separate from balance of order to accommodate for warehouse space and the inspection process.

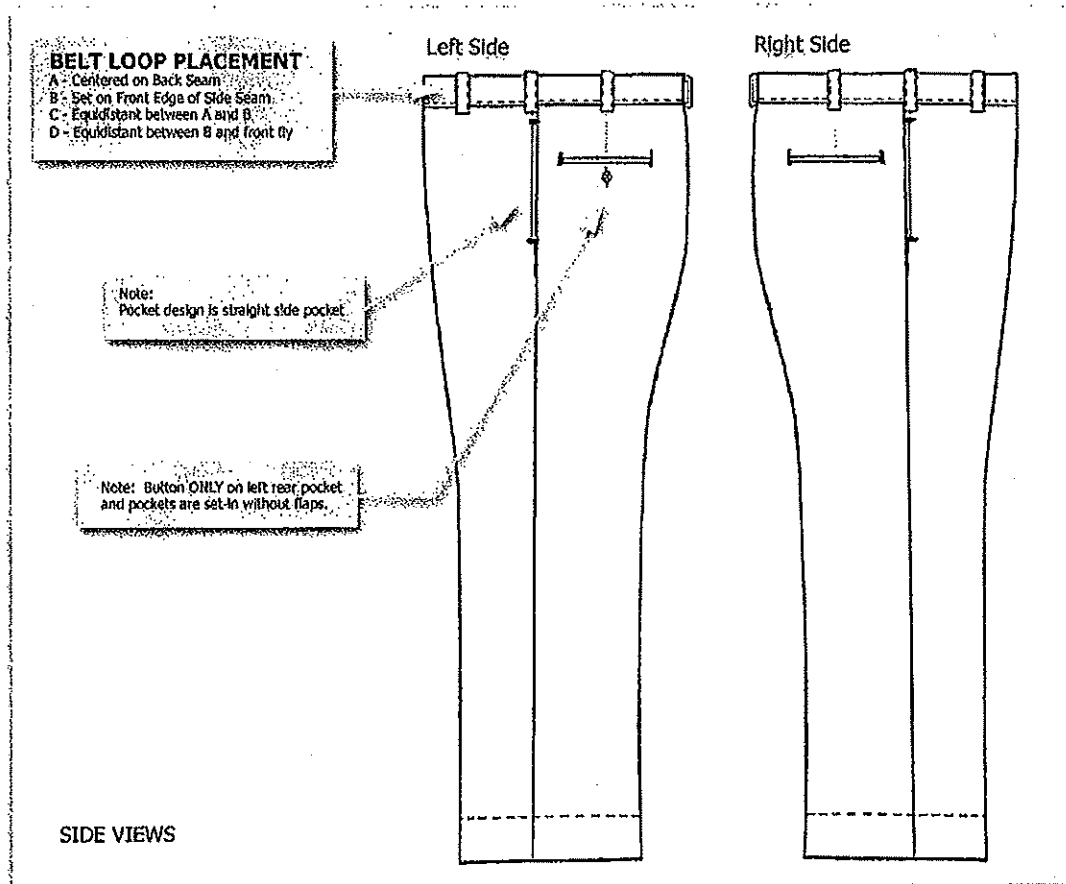


Figure 1

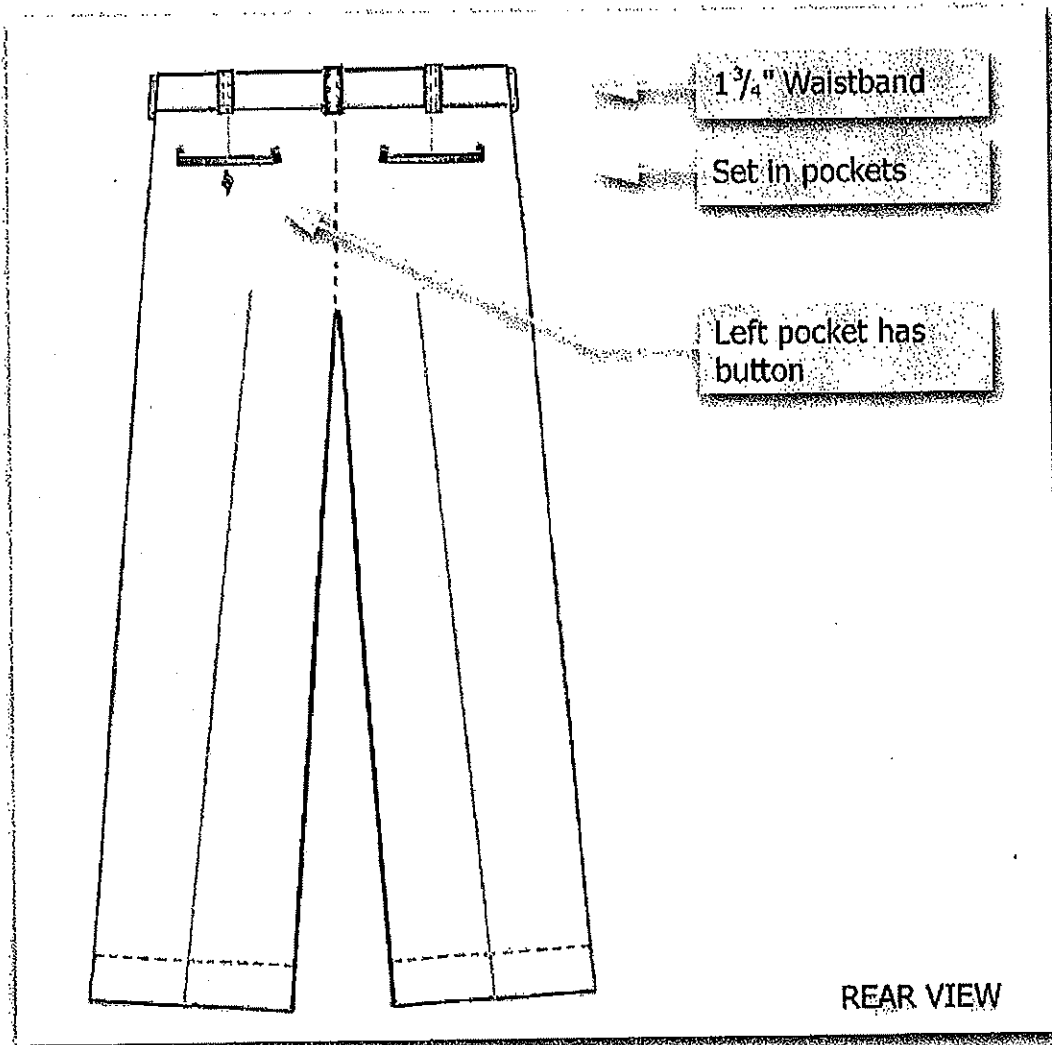


Figure 2

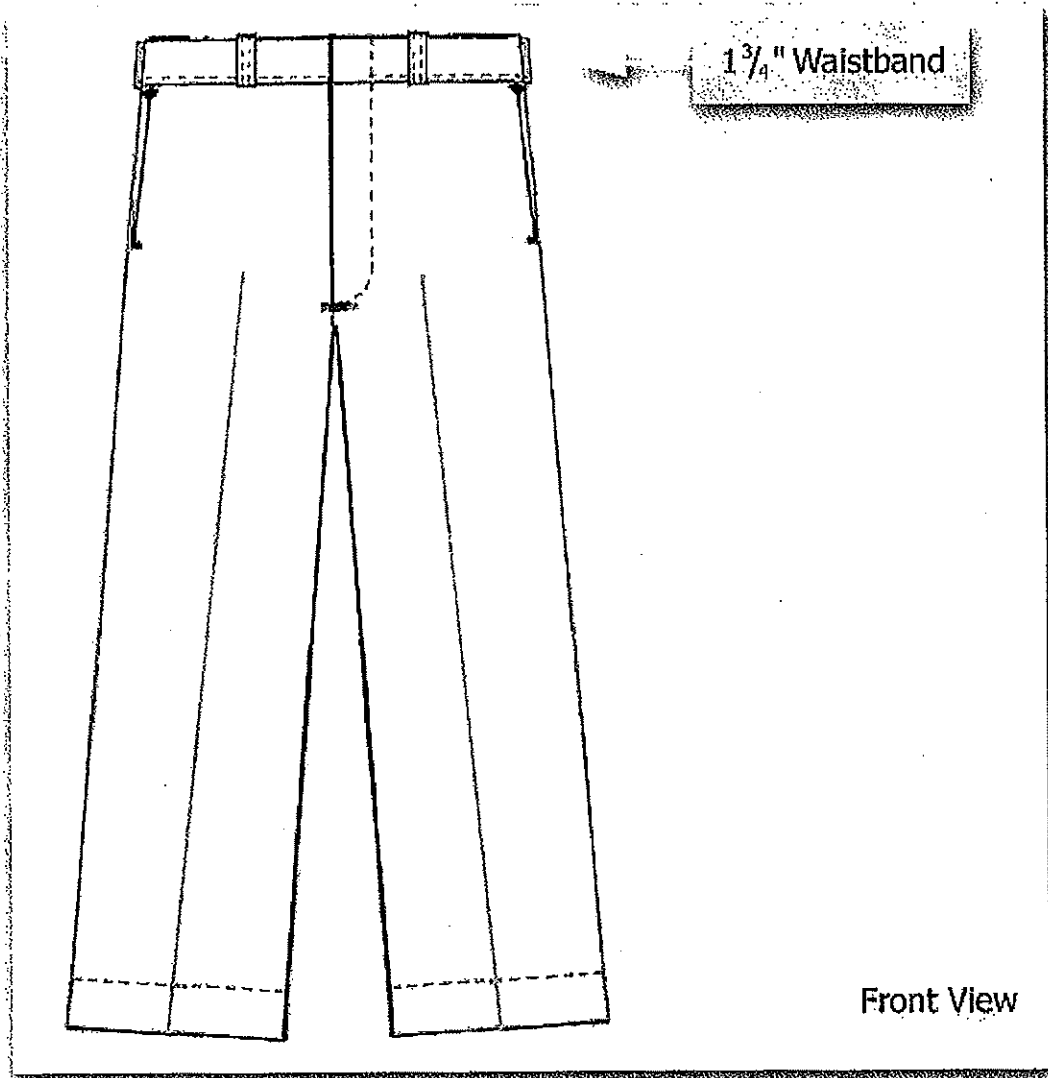


Figure 3

Texas A&M Corps of Cadets Specifications Trousers, Male Pink Elastique

<u>Basic Material:</u>	16/16-½ oz. Elastique, 55%Dacron Polyester/45% Wool, two ply warp and two ply filling, Raeford #645-437.
<u>Lining:</u>	The material for waistband lining, belt loop lining, right fly lining, left fly interlining, crotch piece, and pocket stays shall be cloth, cotton, Silesia, unbleached.
<u>Pocket Material:</u>	All pocketing shall be poly/cotton twill.
<u>Thread:</u>	All trousers shall be made with a vat A-3 cord, mercerized threads, and the trousers shall be seat-seamed with a 24-3-cord thread.
<u>Waistband Curtain:</u>	Shall be Snug-tex Ivory or equivalent.
<u>Zipper:</u>	Number 5 Talon. (metal)

Design

The trousers shall be of single needle construction with separate waistband, two straight side pockets and two back pockets without flaps. The left back pocket shall close with a single button sewn to the inner facing of the pocket and passing through a buttonhole in the outer pocket.

The waistband shall be wide enough to receive a 1 ½" belt. The belt looping shall be 1" wide, innerlined with pellow and sewn under the waistband at the bottom. There shall be 7 belt loops on each pair of trousers. The waistband shall have metal or titanium hook front closing. Waistband to be finished in an open manner (Browne outlet method) with a minimum two and one half inch outlet showing no raw edges. The waistband seam shall be pressed open and topstitched for a neat appearance.

Trousers shall close with number 5 Talon zipper; also French fly with 1 button. (metal)


Trousers shall be constructed with a "Browne outlet" as noted above and shall have a one inch inseam outlet in back panel from crotch to full length of inseam.

All trousers shall be bartacked at all points of strain, namely 2 bartacks on each pocket, and 1 bartack at the bottom of the fly. (5)


Trousers will have finished bottoms, with a 3-inch turn-up.

Seam manufacturer's identification and a permanent press size label on four sides, to underside of right pocket at bottom and outer side of material.

Workmanship shall be done in such a manner that all loose threads shall be removed, pressed smooth, and legs creased in the center with the seams matching at the bottom and the crotch; or inseam in the crotch may be slightly back of the outseams.

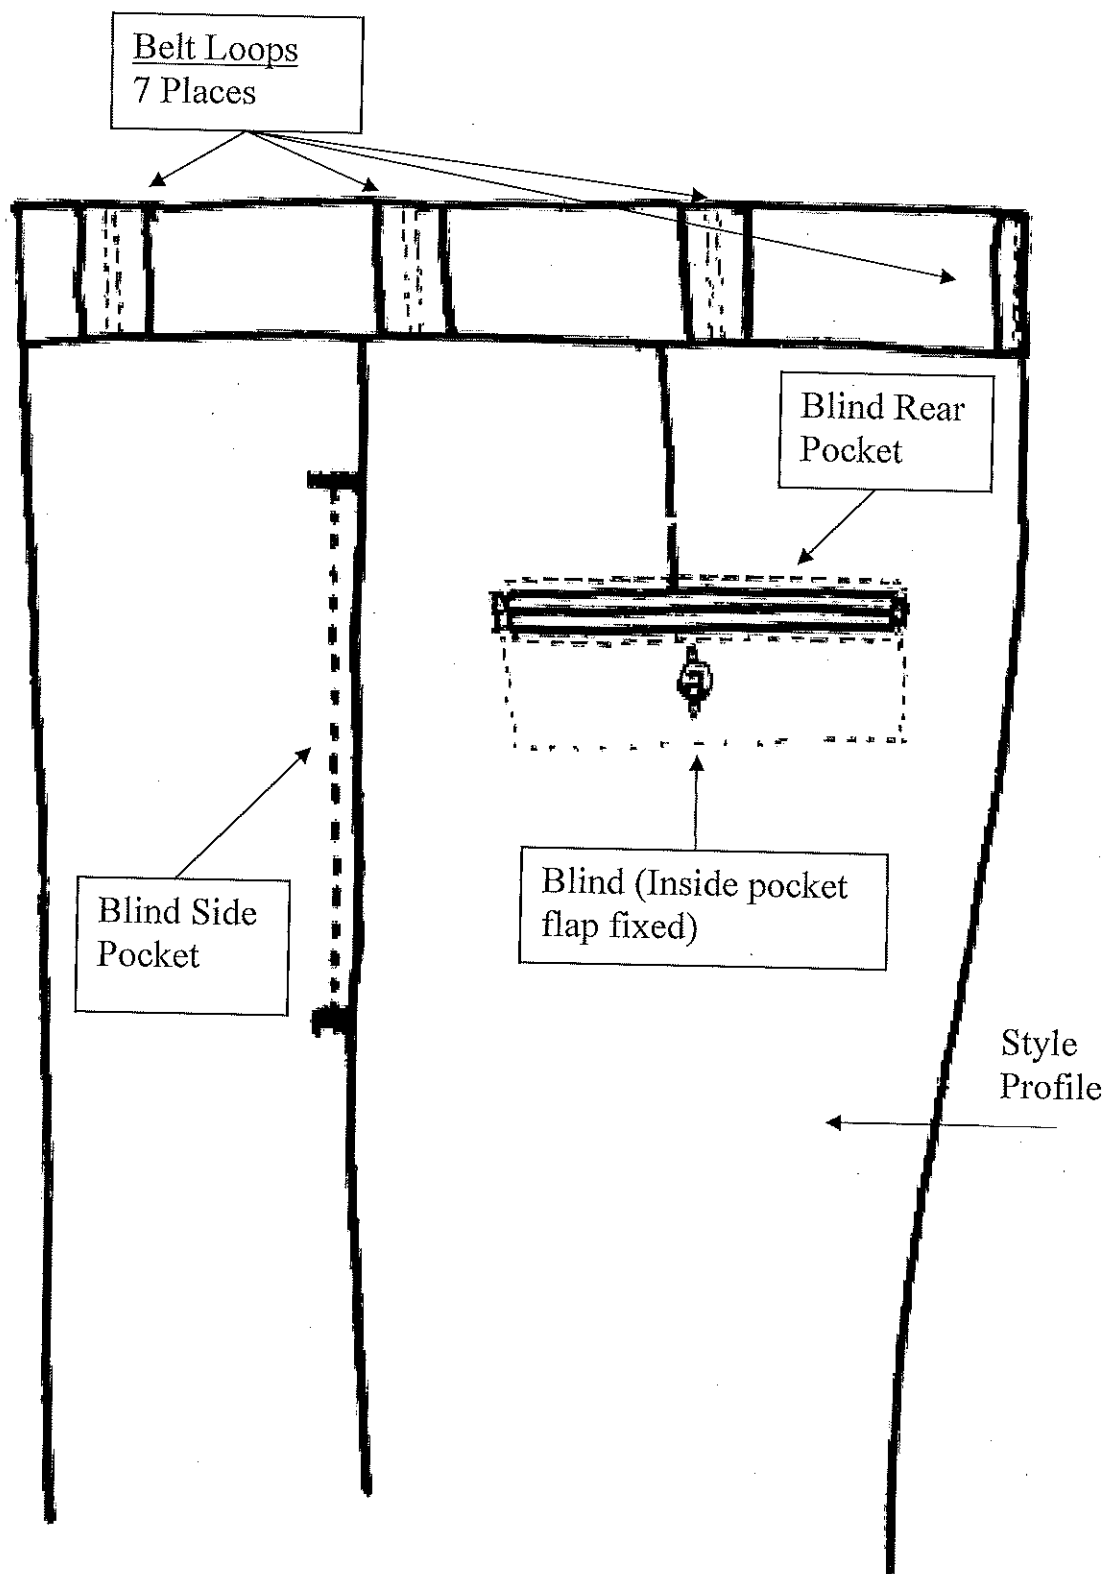

Supplemental Drawing A

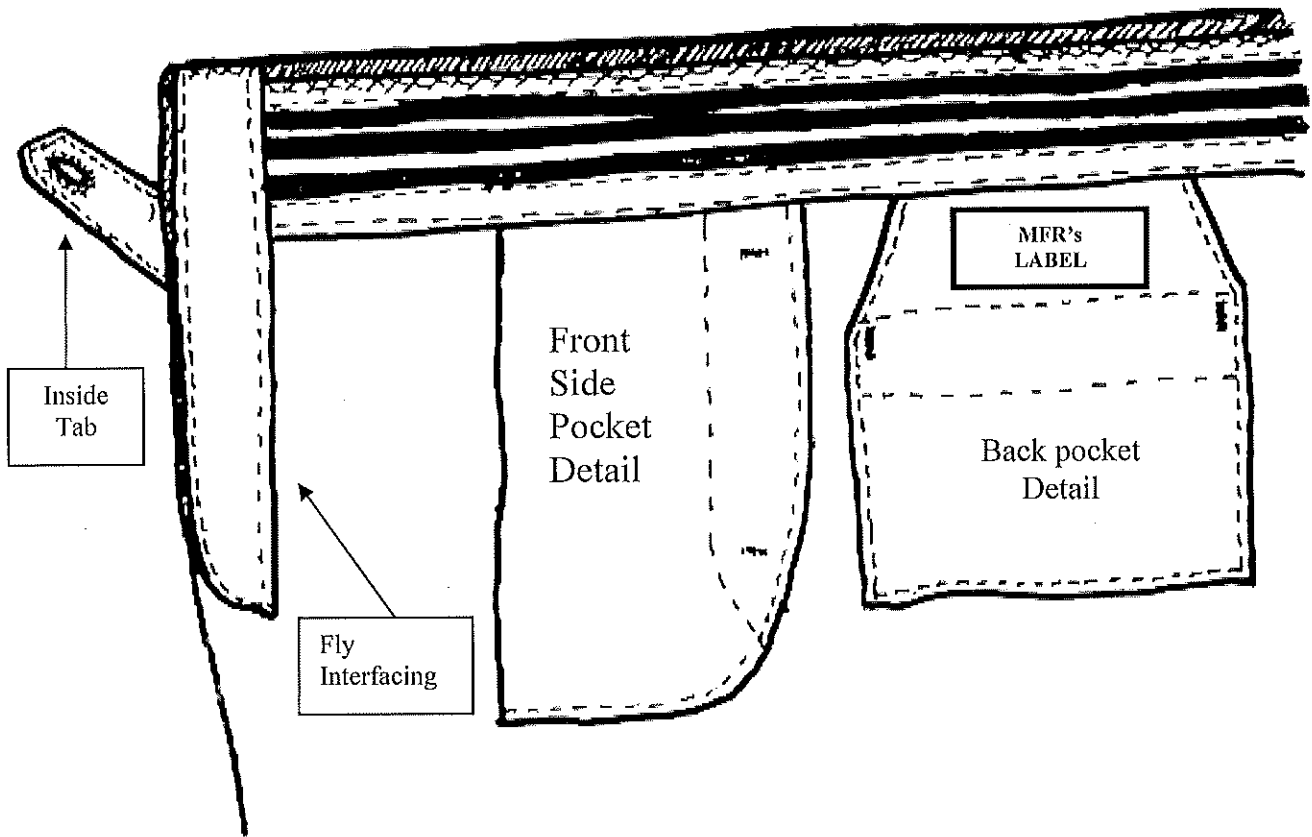

Supplemental Drawing B

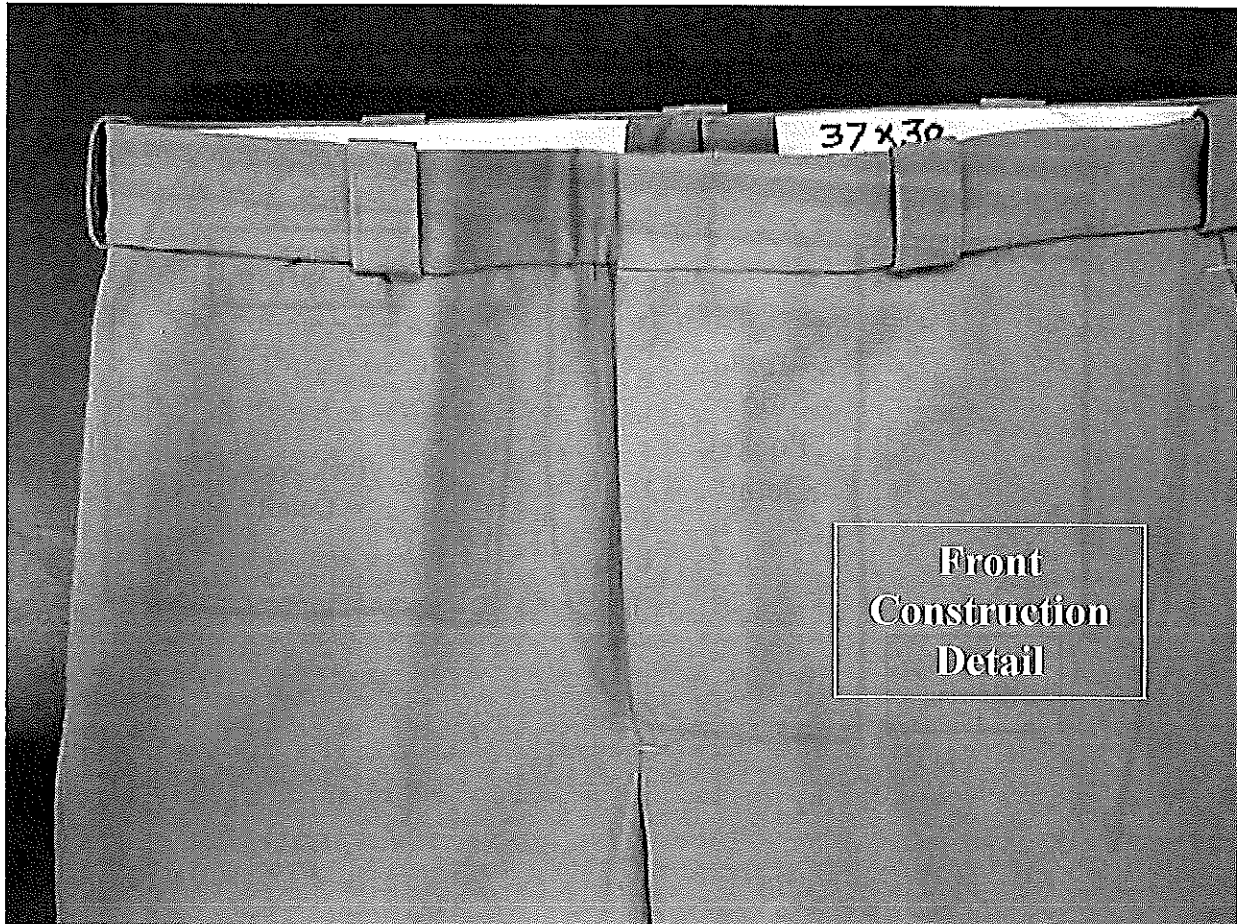


Photo 1

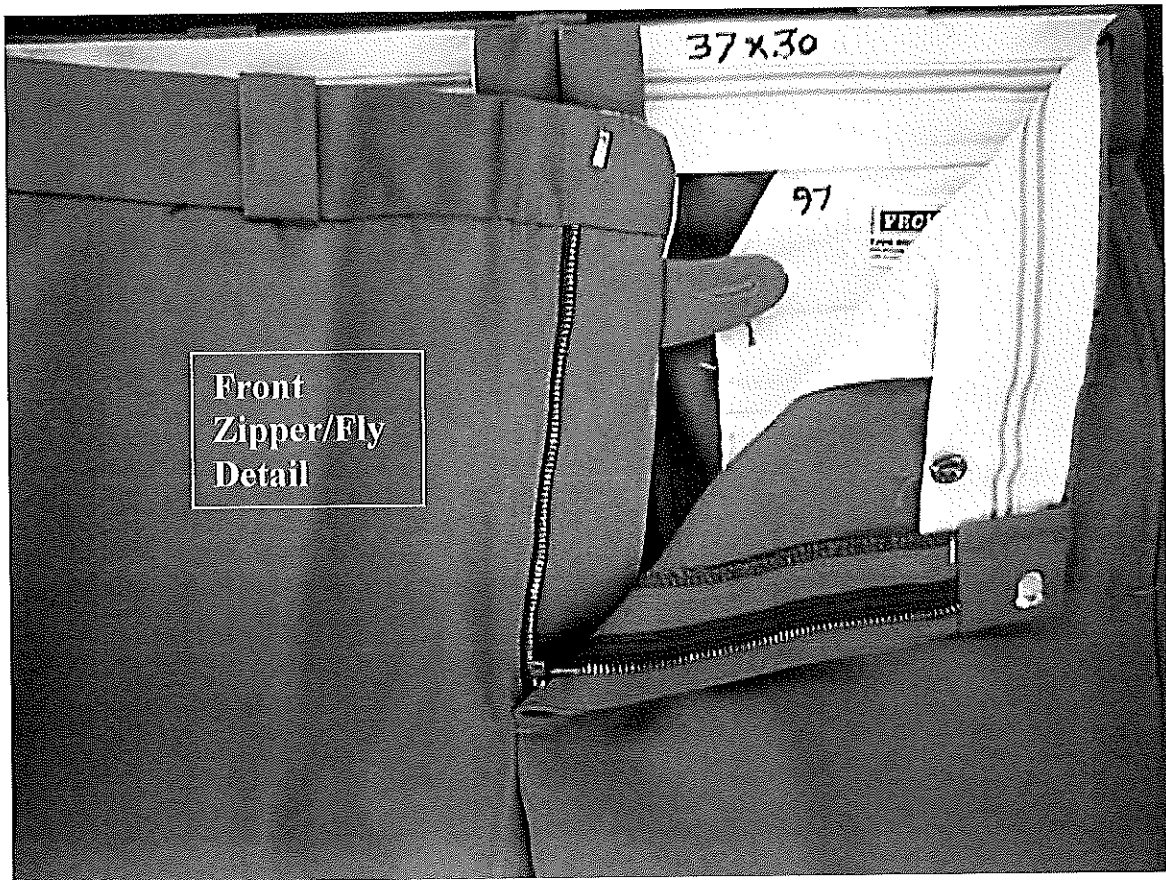


Photo 2



Rear Detail
Notice Pockets

Photo 3



Photo 4

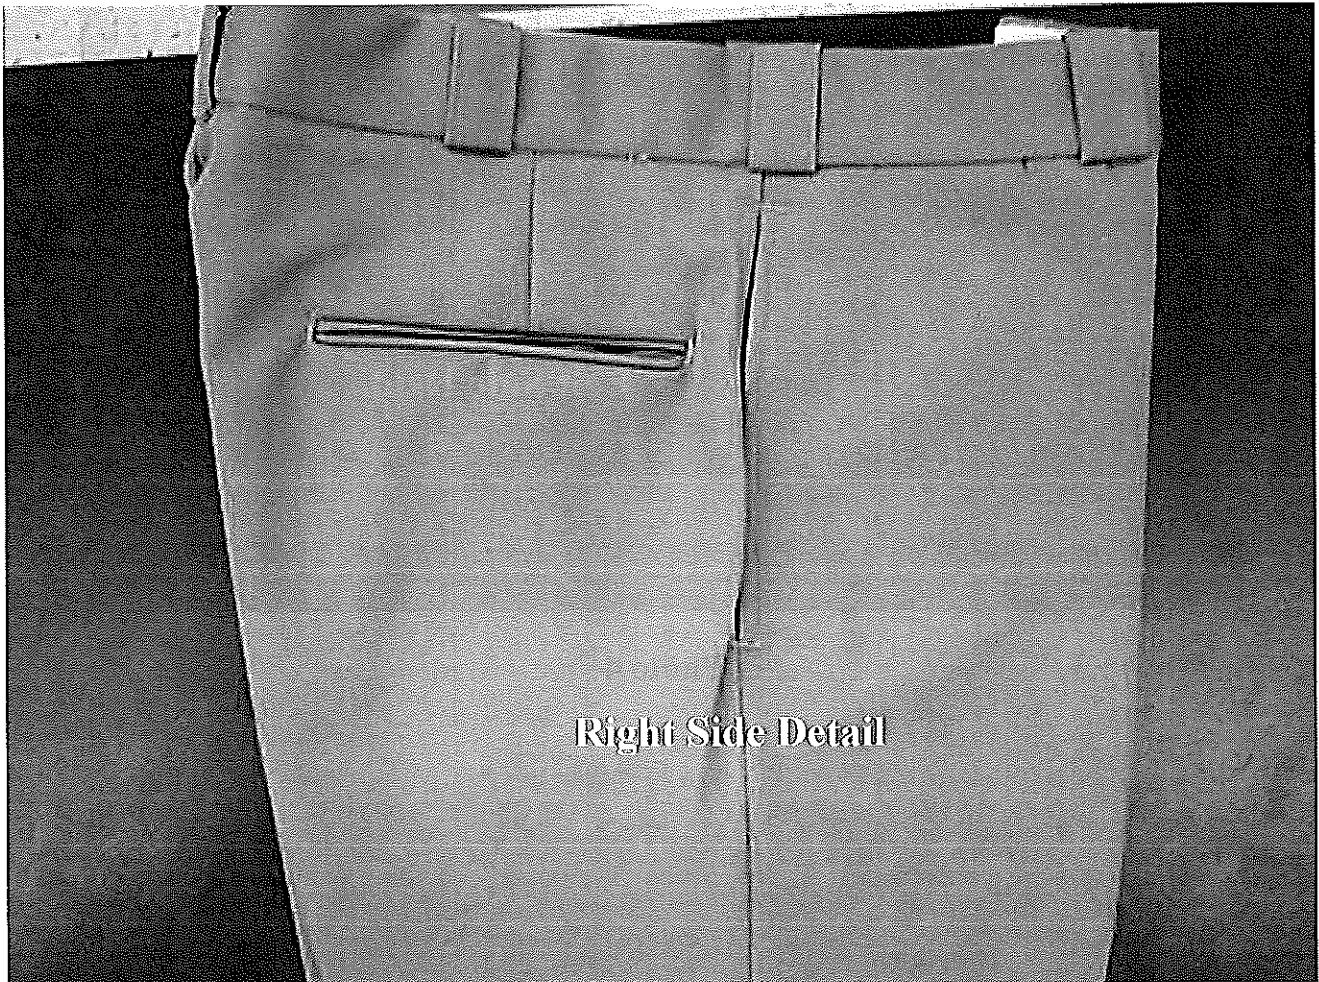


Photo 5

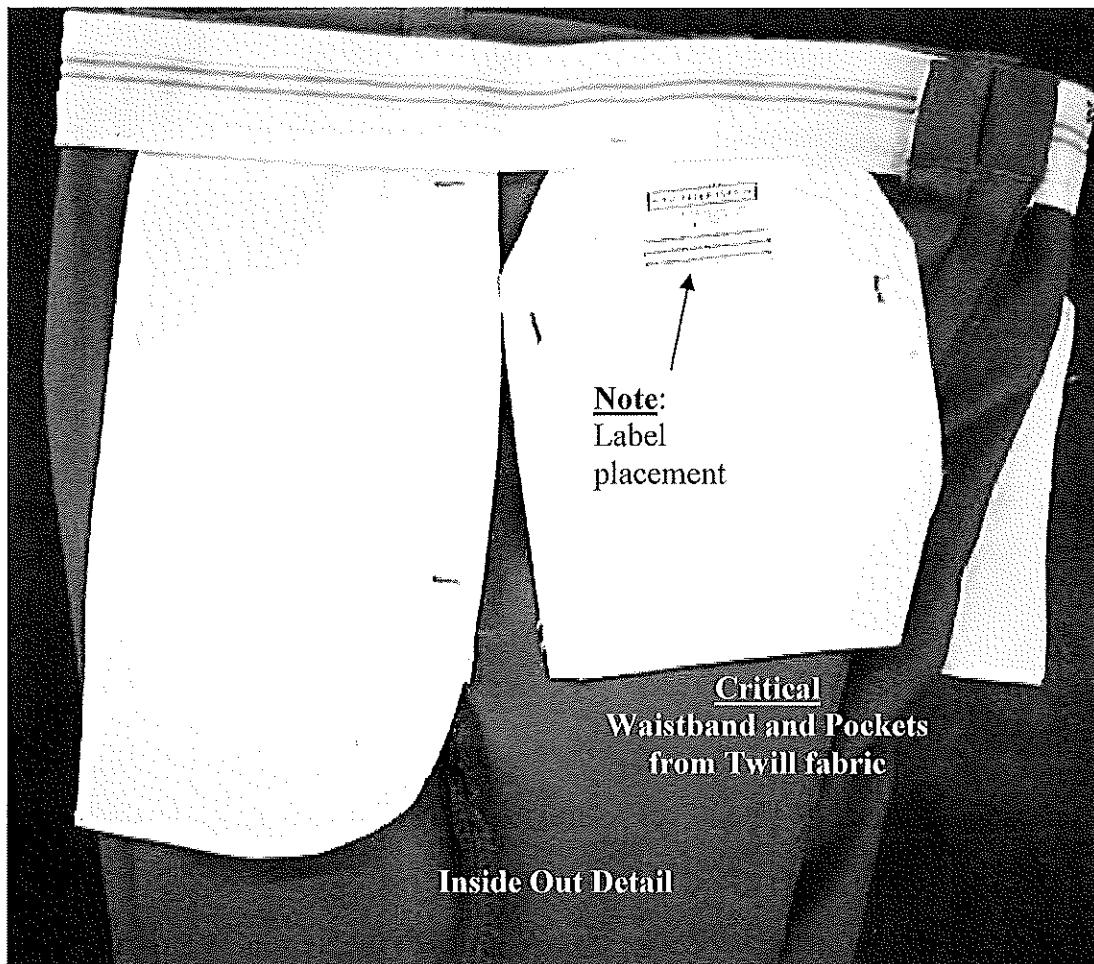


Photo 6